ASSEMBLY INSTRUCTION

1

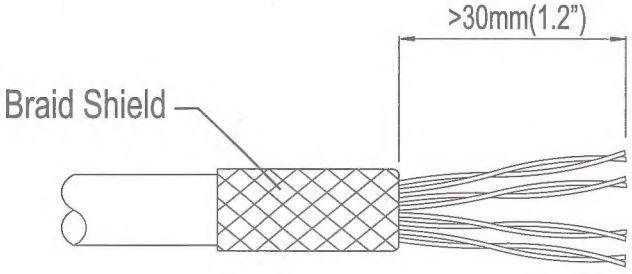

- *Strip off 30~40mm of cable jacket.*
- *Pull back the grounding foil or screen.*

2

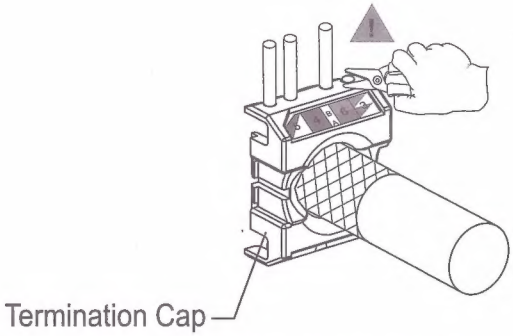

- *Insert the cable into the termination cap and fan out all four twisted pairs.*
- *Following the wire color-coding printed on the termination cap, place the wires into the relevant slots.*
- *Trim the wires flush to the termination cap.*

3

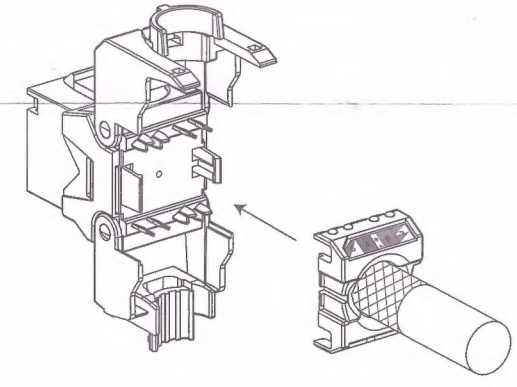

- *Insert the termination cap into the jack.*

4

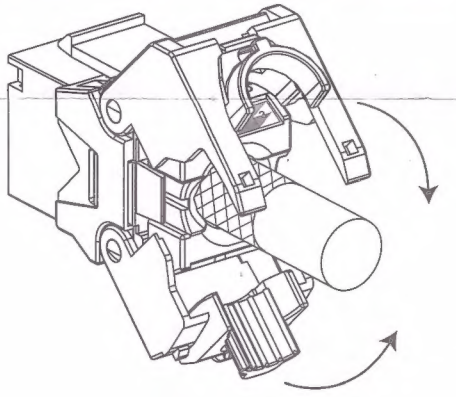

- *Close the covers by pressing the termination cap until they click.*

5

- *Secure the cable grounding and the cable fixture using a cable tie.*

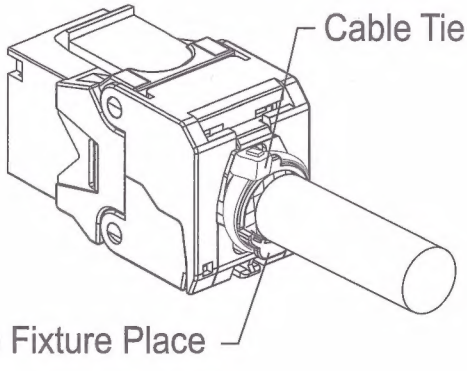

To obtain information on CommScope® products, contact your local CommScope® account representative, PartnerPRO™ Network Partner or visit our website at www.commscope.com

©2016 CommScope, Inc.
All Rights Reserved

This product is covered by one or more U.S.patents or their foreign equivalents. For patents, see www.commscope.com /ProductPatent/ProductPatent.aspx